


6. Strain-Relief USB Cable

Now that you've positioned the unit, clip the USB cable into strain relief in the base to secure it.

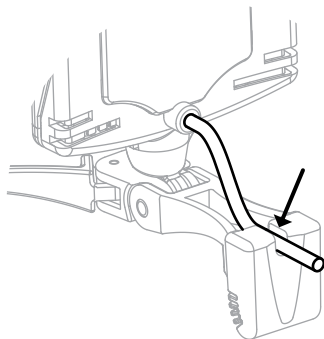

7. Ready To Go

Now you've completed the installation and setup process. Remember: TrackIR software must be running before starting any TrackIR Enhanced™ titles.


Visit www.naturalpoint.com today for the latest software, support, videos, events, tips and tricks, and much more!

Technical Notes

- If using a USB hub with the device, make sure that it is externally powered (plugs into the wall). For best performance avoid using a USB hub.
- Windows 2000, XP and Vista users must be logged in as an administrator to install the software. If you only have one user login on your computer, you probably have administrator privileges.
- For further setup information, please view the instruction manual on the installation CD or the website.

Friendly Customer Support

If you have any difficulties after reading the instruction manual, please visit www.naturalpoint.com, or call 1.541.753.6645 between 9AM-5PM PT

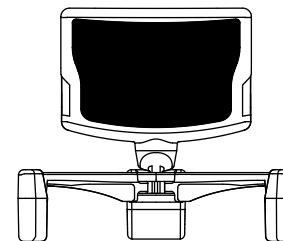


Quick Start Guide

1. Install Software


Download the latest TrackIR installer from the website or use software CD if included. Run the installer and follow its prompts.

Note: TrackIR software must be running before starting your game/sim.

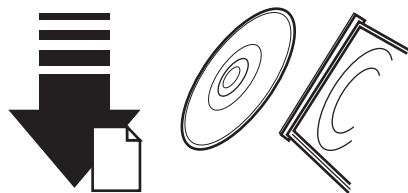

2. Plug In Hardware

Connect the device's cord to your computer's USB port.


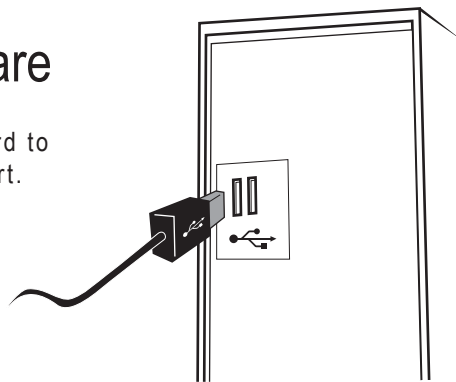


3. Place the Device

Attach USB camera to base using the magnetic connector. (Base and camera may be disconnected as needed.)


Place the unit on your monitor, facing you. Adjust the device's base orientation to either clip to your monitor or sit atop it.

Gently tilt camera head to adjust angle of view.

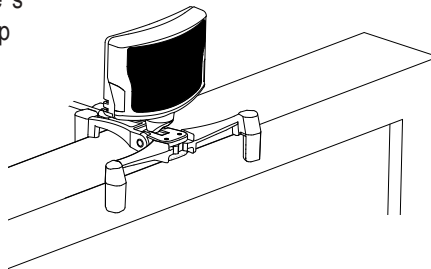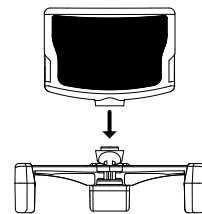


4. Place the TrackClip

The spring steel clip slips easily onto a hat brim or headset.

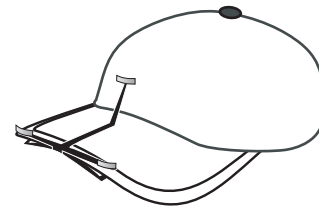


5. Adjust Position

Position your TrackClip level with the device...

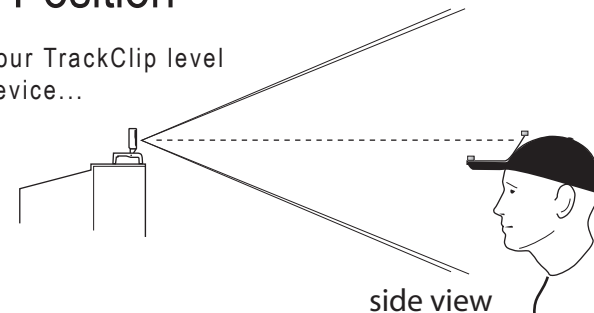

side view

and in the center of its field of view, for the best performance.

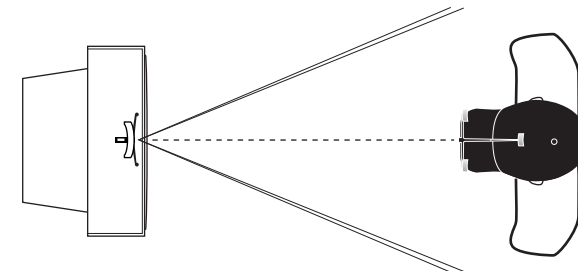

top view

Position the device further away if you'd like more room to move around (we suggest somewhere between 2 and 5 feet).